Panasonic®

Quick Guide/Quick Guide/Quick Guide/ Quick Guide/Quick Guide/Quick Guide/ Quick Guide

Model No./Model No./Model No./ **KX-TG1611FX**
Model No./Model No./Model No./ **KX-TG1612FX**
Model No. **KX-TG1613FX**
KX-TG1711FX
KX-TG1712FX

Contents/Contents/Contents/ Contents/Contents/Contents/Contents	Page/Page/Page/ Page/Page/Page/Page
Croatian instructions	2 - 8
Slovene instructions	9 - 15
Romanian instructions	16 - 22
Bulgarian instructions	23 - 29
Serbian instructions	30 - 36
Macedonian instructions	37 - 43
Bosnian instructions	44 - 50

Panasonic®

Bosnian

Model No. **KX-TG1611FX/KX-TG1612FX/KX-TG1613FX**
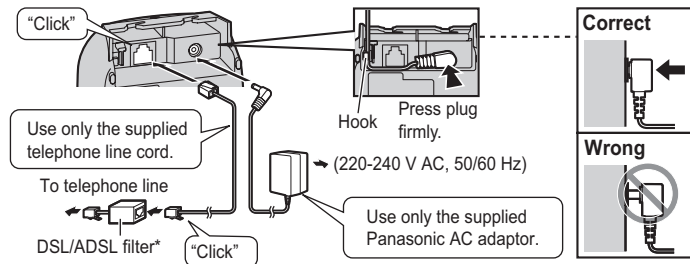**KX-TG1711FX/KX-TG1712FX**

Quick Guide
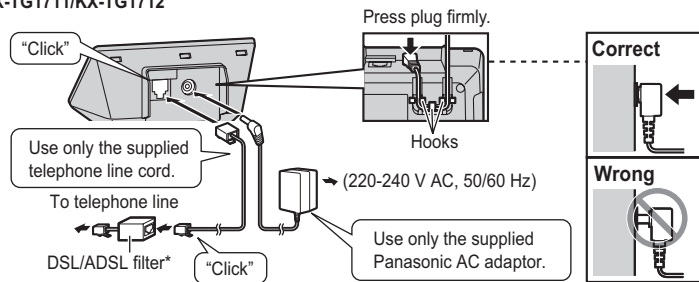
Connections

Base unit

Important:
- First plug in the supplied telephone line cord and then plug in the AC adaptor cord. (KX-TG1611/ KX-TG1612/KX-TG1613)
- If you use a telephone line cord which is not supplied, the unit may not work properly.

■ **KX-TG1611/KX-TG1612/KX-TG1613**

"Click"

Use only the supplied telephone line cord.

To telephone line

DSL/ADSL filter*   "Click"

Hook   Press plug firmly.

↪ (220-240 V AC, 50/60 Hz)

Use only the supplied Panasonic AC adaptor.

Correct

Wrong

*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.

■ **KX-TG1711/KX-TG1712**

"Click"

Press plug firmly.

Hooks

Use only the supplied telephone line cord.

To telephone line

DSL/ADSL filter*   "Click"

↪ (220-240 V AC, 50/60 Hz)

Use only the supplied Panasonic AC adaptor.

Correct

Wrong

*DSL/ADSL filter (not supplied) is required if you have DSL/ADSL service.

2

Connections

Charger

Press plug firmly.

Hooks

➡ (220-240 V AC, 50/60 Hz)

Use only the supplied Panasonic AC adaptor.
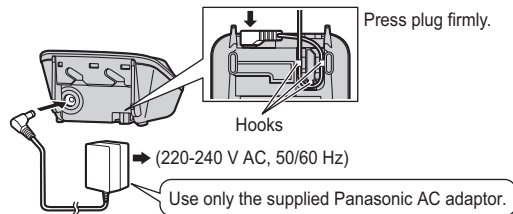
Battery installation/Battery charging

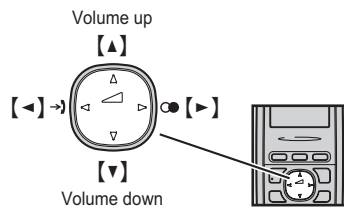**Charge for about 7 hours.**

Rechargeable Ni-MH ONLY
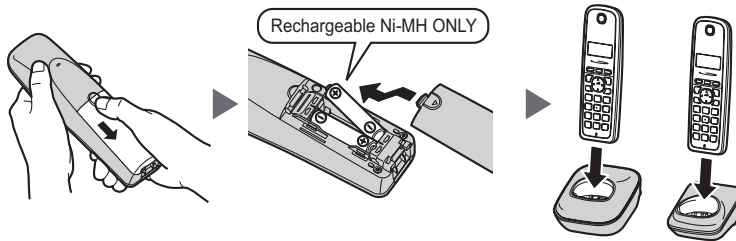
Note:
● USE ONLY Ni-MH batteries AAA (R03) size.
● Do NOT use Alkaline/Manganese/Ni-Cd batteries.

Operating tips

Navigator key
– 【▲】, 【▼】, 【◄】, or 【►】: Scroll through various lists and items.
– ◢ (Volume: 【▲】 or 【▼】): Adjust the receiver volume while talking.
– 【◄】 (➔): Caller list): View the caller list.
– 【►】 (◐●: Redial): View the redial list.

Volume up
【▲】

【◄】 ➔) ◐● 【►】

【▼】
Volume down

3

Display language (Handset) (default: "English" (English))

16 display languages are available.

You can select "English", "Deutsch", "POLSKI", "Magyar", "Slovenčina", "Čeština", "Hrvatski", "Slovenščina", "Eesti", "Lietuviškai", "Latviešu", "ROMÂNĂ", "БЪЛГАРСКИ", "Srpski", "МАКЕДОНСКИ", or "Shqip".

● If you select a language you cannot read:
【☏⏻】 → 【◼/OK】 → 【▾】 4 times → 【◼/OK】 2 times → 【↕】: Select your desired language. → 【◼/OK】 → 【☏⏻】

Date and time (Handset)

1 【◼/OK】
2 【↕】: "Set Time" (Set time) → 【◼/OK】
3 【↕】: "Date & Time" (Date and time) → 【◼/OK】
4 Enter the current date, month, and year. → 【◼/OK】
5 Enter the current hour and minute. → 【◼/OK】
6 【☏⏻】

Dialling mode (Handset) (default: "Tone" (Tone))

1 【◼/OK】
2 【↕】: "Setup" (Setup) → 【◼/OK】
3 【↕】: "Dial Mode" (Dial mode) → 【◼/OK】
4 【↕】: Select the desired setting.
5 【◼/OK】 → 【☏⏻】

Basic operations

Making/Answering calls (Handset)	
Making calls	Dial the phone number. → 【✆】
Answering calls	【✆】
To hang up	【☏⏻】
To adjust the receiver volume	Press 【▲】 or 【▾】 repeatedly while talking.
Making a call using the redial list	【►】 (◉) → 【↕】: Select the desired phone number. → 【✆】
Temporary tone dialling (for rotary/pulse service users)	Press ⚹ before entering access numbers which require tone dialling.

Basic operations

Making/Answering calls (Handset)

Handset ringer volume	1 [≣/OK] 2 [↕]: "**Ringer Setup**" (Ringer setup) → [≣/OK] 3 [↕]: "**Volume**" (Volume) → [≣/OK] 4 [↕]: Select the desired volume. 5 [≣/OK] → [✆]

Phonebook (Handset)

Adding entries	1 [📖] 2 [↕]: "**New Entry**" (New entry) → [≣/OK] 3 Enter the party's name (12 characters max.). → [≣/OK] • You can change the character entry mode by pressing [📖]. • To enter a name, see the character table in the operating instructions. 4 Enter the party's phone number (24 digits max.). → [≣/OK] 2 times 5 [✆]
Making calls	1 [📖] 2 [↕]: "**Show List**" (Show list) → [≣/OK] 3 [↕]: Select the desired entry. • To view the phone number, press [≣/OK]. → [↕]: "**Phone No.**" (Phone number) → [≣/OK] 4 [✆]

Frequently asked questions

| Question	Cause/solution
Why is Ψ flashing?	• The handset is too far from the base unit. Move closer. • The base unit's AC adaptor is not properly connected. Reconnect AC adaptor to the base unit. • The handset is not registered to the base unit. Register it (page 7).
Why can I not make calls?	• The dialling mode may be set incorrectly. Change the setting (page 4).
What should I do when the handset does not turn on?	• Make sure the batteries are installed correctly. • Fully charge the batteries. • Clean the charge contacts and charge again.

Frequently asked questions

Question	Cause/solution
How long is the battery operating time?	• When you are using fully-charged Ni-MH batteries (supplied batteries); In continuous use: 15 hours max. Not in use (standby): 170 hours max. • It is normal for batteries not to reach full capacity at the initial charge. Maximum battery performance is reached after a few complete cycles of charge/discharge (use). • Actual battery performance depends on usage and ambient environment.
Can I keep the handset on the base unit or charger when I am not using it?	• Even after the batteries are fully charged, the handset can be left on the base unit or charger without any ill effect on the batteries.
When should I replace the batteries?	• If the batteries are fully charged until ▉▉▉ is displayed, but ▭▮ is displayed after a few calls, replace the batteries with new ones.
What is a PIN?	• The PIN is a 4-digit number that must be entered in order to change certain base unit settings. The default PIN is "0000".
What should I do to display caller information?	• You must subscribe to a Caller ID service. Contact your service provider/telephone company for details.
What should I do when noise is heard, sound cuts in and out?	• You are using the handset or base unit in an area with high electrical interference. Re-position the base unit and use the handset away from sources of interference. • Move closer to the base unit. • If you use a DSL/ADSL service, we recommend connecting a DSL/ADSL filter between the base unit and the telephone line jack. Contact your DSL/ADSL provider for details. • Unplug the base unit's AC adaptor to reset the unit and turn off the handset. Reconnect the adaptor, turn on the handset and try again.
What should I do when the operating time seems to be shorter even after I fully charged the batteries?	• Clean the battery ends ($\oplus$, $\ominus$) and the charge contacts with a dry cloth and charge again.

Registering a handset to the base unit

The supplied handset and base unit are pre-registered. If for some reason the handset is not registered to the base unit, re-register the handset.
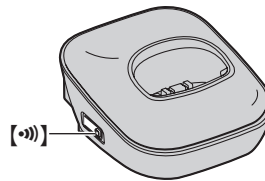
Handset

1 **[**≡**/OK]**
2 **[**♦**]**: **"Setup"** (Setup) → **[**≡**/OK]**
3 **[**♦**]**: **"Register HS"** (Register handset) → **[**≡**/OK]**

[≡**/OK]**
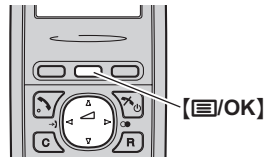
Base unit

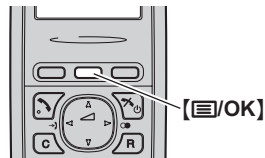■**KX-TG1611/KX-TG1612/KX-TG1613**

Press and hold **[**∙))**]** for about 5 seconds.
(No registration tone)

[∙))**]**

Handset

Wait until **"PIN:____"** (PIN:____) is displayed. →
Enter the base unit PIN (default: **"0000"**). →
[≡**/OK]**
● The next step must be completed within 90 seconds.

[≡**/OK]**

Handset

Wait until a long beep is heard and then enter the desired handset number you want to register.
● When the handset has been registered successfully, Ⴠ stops flashing.

7

Optional service (Caller ID)

If you subscribe to a Caller ID service,

caller information will be displayed when a call is received, or when viewing missed calls.

8

Declaration of conformity form/Declaration of conformity form/Declaration of conformity form

Panasonic

Panasonic System Networks Co., Ltd.
1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531 Japan

Declaration of Conformity   017806
Document No. PCTP-110097-01

(Issuer's name & address)
 Panasonic System Networks Co., Ltd.
 Hakata-ku, Fukuoka, Japan
(Object of the declaration)   < A >
 (Product)   : Digital Enhanced Cordless Telephone
 (Trade Name) : Panasonic
 (Model Nr.)   Base unit - KX-TG1611E,KX-TG1612E,KX-TG1613E,KX-TG1614E,
 KX-TG1711E,KX-TG1712E,KX-TG1713E,KX-TG1714E,KX-TG1611FX,KX-TG1612FX,
 KX-TG1613FX,KX-TG1711FX,KX-TG1712FX,KX-TG1711G,KX-TG1611JT,KX-TG1612JT,
 KX-TG1711JT,KX-TG1611PD,KX-TG1711PD,KX-TG1611SP,KX-TG1612SP,KX-TG1613SP,
 KX-TG1711SP,KX-TG1611NE,KX-TG1612NE,KX-TG1613NE,KX-TG1711NE,KX-TG1712NE,
 KX-TG1611FR,KX-TG1612FR,KX-TG1613FR,KX-TG1611TR,KX-TG1711TR,KX-TG1611GR,
 KX-TG1711GR,KX-TG1611BL,KX-TG1711BL,KX-TG1611HG,KX-TG1711HG,KX-TG1611NL,
 KX-TG1612NL,KX-TG1613NL
 Handset - KX-TGA161E, KX-TGA171E, KX-TGA161EX, KX-TGA171EX,KX-TGA161FX,
   KX-TGA171FX
 AC Adaptor - PNLV226E, PNLV226CE
 Charger Unit - PNLC1023
 (Country of Origin): China
The object of the declaration described above is in conformity with the requirements of the
following EU legislations and harmonized standards:
 (Council Directive)   : 1999/5/EC   < B >
 (Council recommendation) : 1999/519/EC
 (Harmonized Standards) : EN 60950-1:2006+A11:2009, EN 301 406 V2.1.1   < C >
  EN 301 489-1 V1.8.1, EN 301 489-6 V1.3.1
  EN 50385:2002, EN 50360 :2001
 (Council directive)   : 2009/125/EC
 (Implementing Measure for ErP Directive): Commission Regulation (EC) No.278/2009
 The last two digits of the year in which the CE marking was affixed the first time: 11
   Signed for and on behalf of :

     H. Matsuo
   Printed Name   : Hiroshi Matsuo
   Title   : Senior Technical Regulation Manager
   Date of issue   : 31 January, 2011

****
Authorised Representative in EU :
Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

(Signature)   :
(Printed name)   : Hans-Joachim Habeck
(Date)   : 0 3. Feb. 2011

The object of the declaration described above <A> is in conformity with the requirements of the following EU legislations <B> and harmonized standards <C>.

The object of the declaration described above <A> is in conformity with the requirements of the following EU legislations <B> and harmonized standards <C>.

The object of the declaration described above <A> is in conformity with the requirements of the following EU legislations <B> and harmonized standards <C>.

9